QUALITY LAB ACCESSORIES

YOUR DISSOLUTION SPECIALISTS

1” Gauge Block for Cannula Stopper
010-06-202



010-06-202 Gauge block is used to set a precise 1” gap between the probe adapter and cannula stopper. The spacer sets the gap that is needed when testing with 900mL of media. It is used with QLA part numbers PRBFS10-ST and PRBFS10-ST82.


Installation steps:

For use with 900mL of media:

1. Place gauge block between components as shown and push together to set spacing.



2. Use a 5/64” hex key (not included) to tighten set screw on collar and lock components in place.

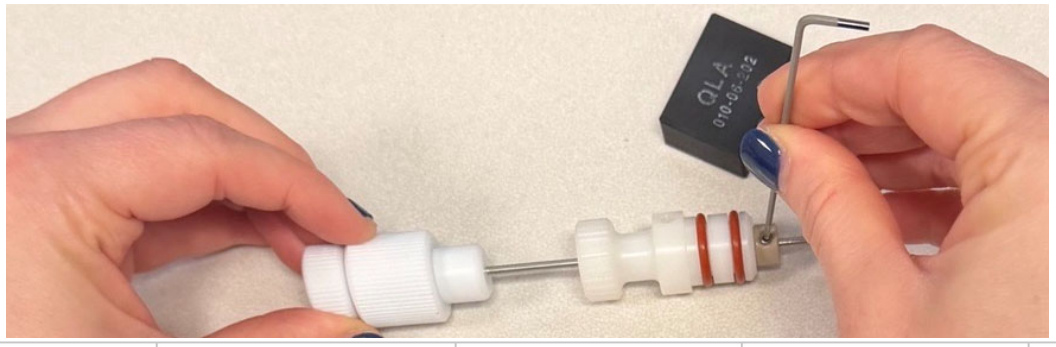

2840 CLYMER AVE | TELFORD, PA 18969 | TEL: 908-685-7500 | FAX: 908-526-4151 | QLA-LLC.COM

For use with 500mL of media:

1. Push components together as shown and tighten the set screw on collar, as shown above.

